

Anz.	EDV-Nr.	Bauteil
4	20040	Mutter M3
2	20046	U-Scheibe $\phi 3.2$
2	20124	Klemmband
2	21844	Linsenkopfschraube M3 x 35
1	27402	Tankverschluss
2	27404	Tankhalter für Rechtecktank
2	27409	Tankdeckel neutral für Rechtecktank
1	31945	Tankrohr poliert für Rechtecktank kurz (45x45x38,5)
2	31946	Stange $\phi 2 \times 35$ (für Tank, kurz)




WEDICO-models®

ASSEMBLY INSTRUCTION

Rechtecktank, Alu poliert


Kurze Ausführung (Abm. : 54 x 45 x 38,5mm)

Art.-Nr. 729-W

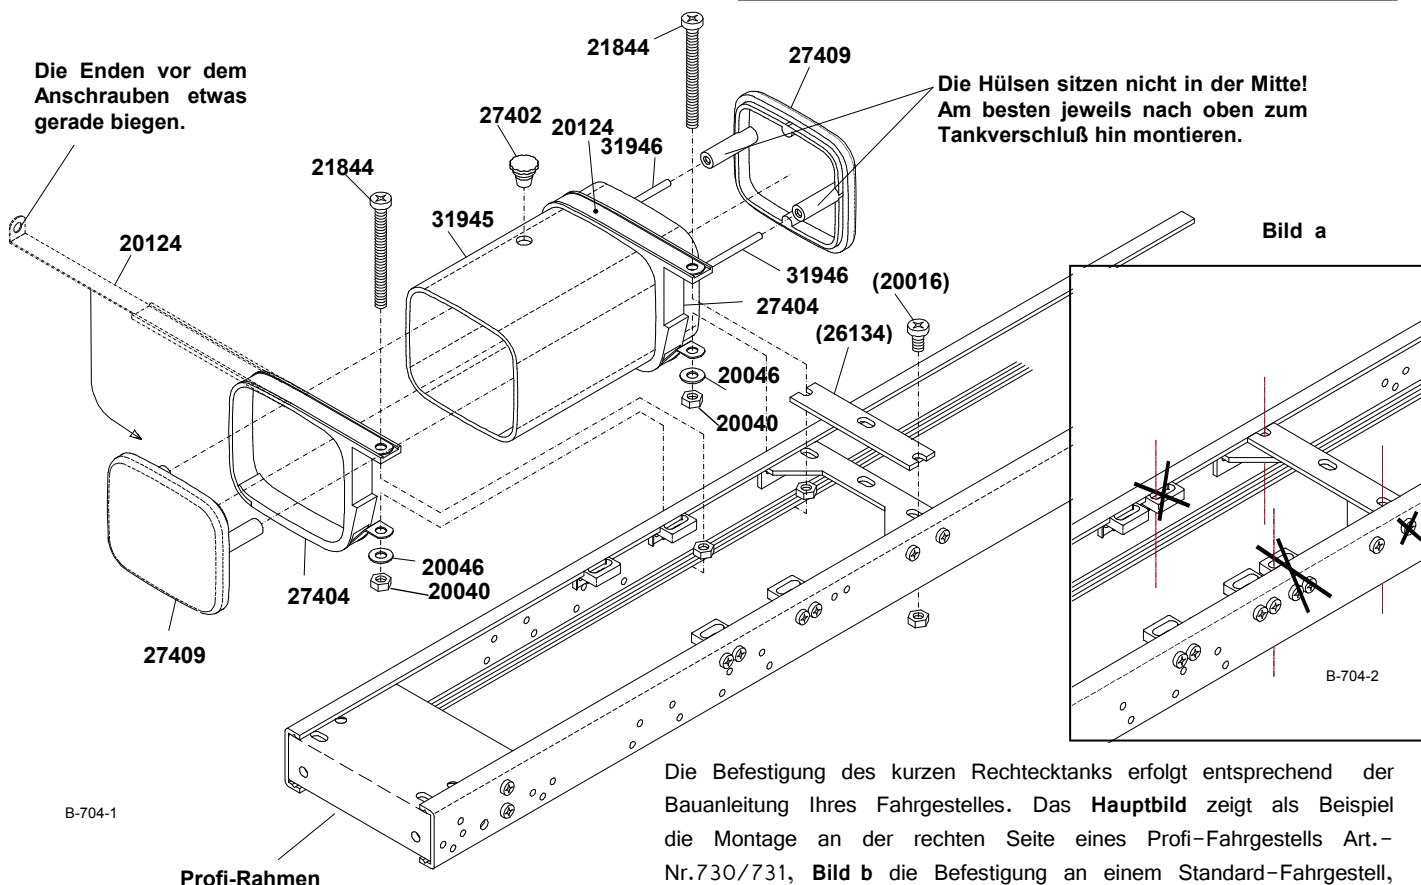

Die Befestigung des kurzen Rechtecktanks erfolgt entsprechend der Bauanleitung Ihres Fahrgestelles. Das **Hauptbild** zeigt als Beispiel die Montage an der rechten Seite eines Profi-Fahrgestelles Art.-Nr.730/731, **Bild b** die Befestigung an einem Standard-Fahrgestell, Art.-Nr. 357/360. Die Befestigung an anderen Fahrgestellen, sowie an der linken Seite erfolgt sinngemäß.

Bild b

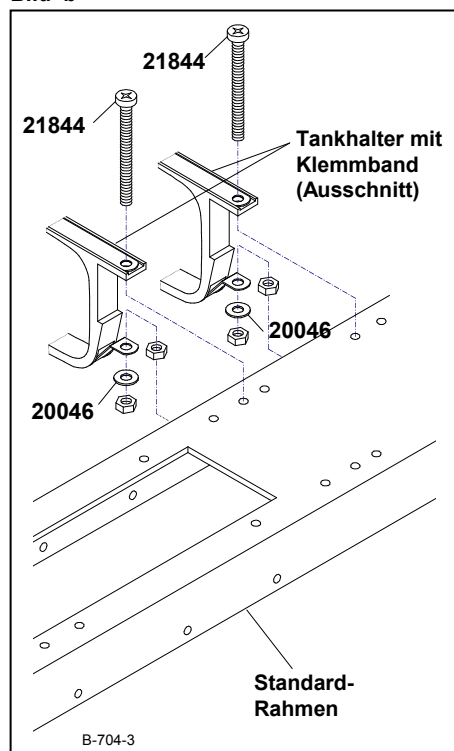

➔ **Hinweis:** Bei der Montage am Profi-Rahmen ändert sich die Befestigung wie folgt (Bild a) :

- a. „Befestigung an Traverse“: Eine der beiden Schrauben M2 muss entfernt werden, damit der Tankhalter am Rahmen anliegt.
- b. „Befestigung an Aufbauwinkel 1 (Kunststoff)“: Der Aufbauwinkel zur Befestigung des Tanks entfällt, die zweite Befestigungsposition ist durch Verschieben variabel.
- c. „Befestigung an Aufbauwinkel 2 (Aluminium)“: Keine Veränderung an den Schrauben des Aufbauwinkels.

Montieren Sie zuerst die Linsenkopfschrauben **21844** M3 x 35 und Muttern **20040** M3 jeweils an die geraden Enden der Klemmbänder **20124** mit den Tankhaltern **27404** an der linken oder rechten Seite des Rahmens.

Drücken Sie in die Hülsen eines Tankdeckels **27409** die Stangen **31946**, schieben dann den Tankdeckel in das Tankrohr **31945** und drücken den zweiten Tankdeckel auf die Stifte und in das Tankrohr. Setzen Sie dann den Tank in die Tankhalter ein. Danach werden

Parts list of the package:

Qty.	EDP-No.	Assembly part
4	20040	Nut M3.....
2	20046	Washer 3.2.....
2	20124	Clamp fitting.....
2	31946	Rod 2 x 35 (for tank, short).....
2	21844	Screw M3 x 35.....
2	27404	Tank support for square tank.....
2	27409	Tank cover, without holes, for square tank
1	27397	Tank tube, polished, for square tank.....
1	21402	Tank lock

please use EDP-number when ordering spare parts




WEDICO-models®

ASSEMBLY INSTRUCTION

Square Tank, polished aluminium


for C.O.E. cabs

Art.-No. 729-W

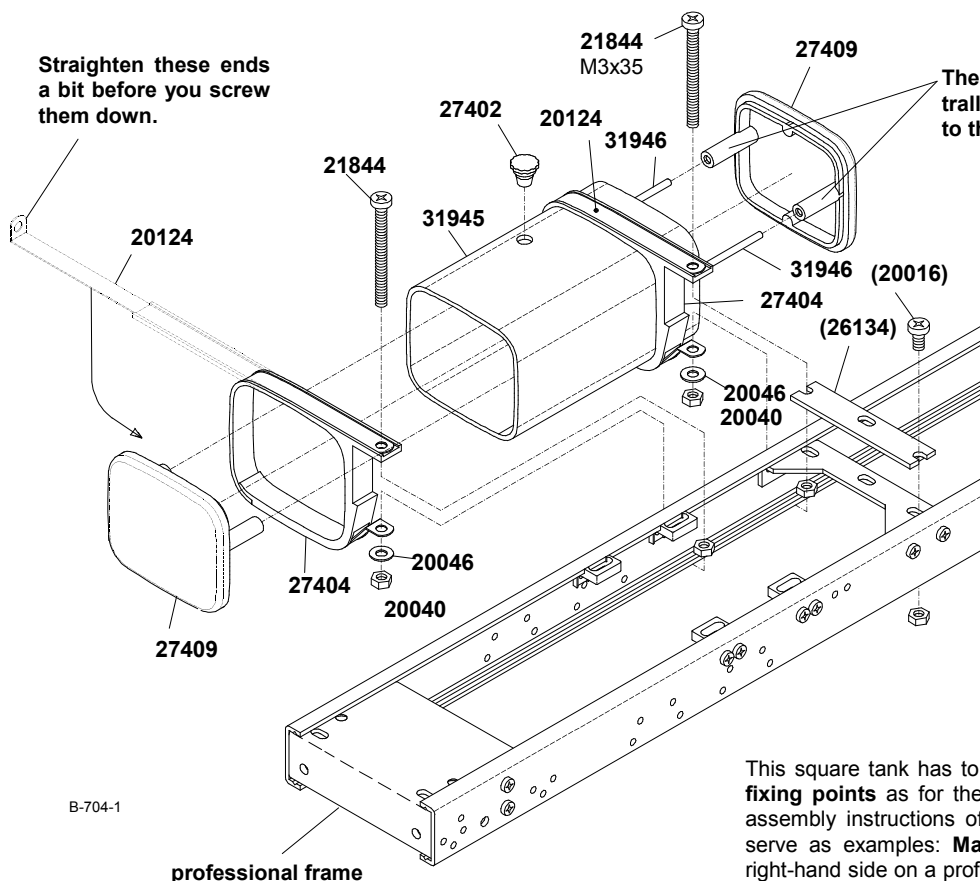


B-704-1

ill. b

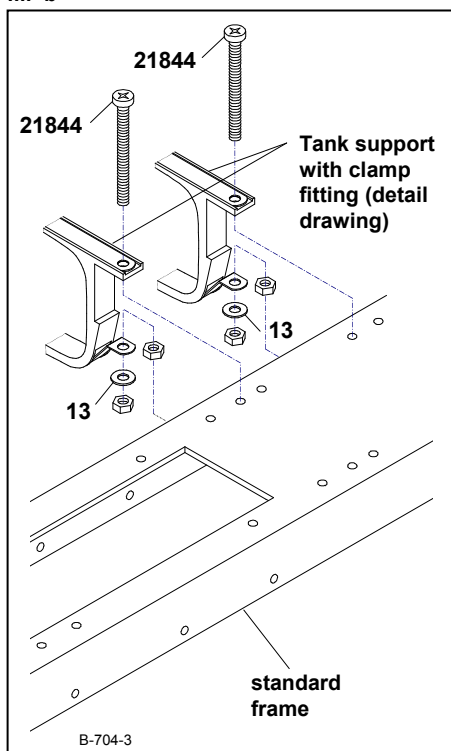

B-704-3

ill. a

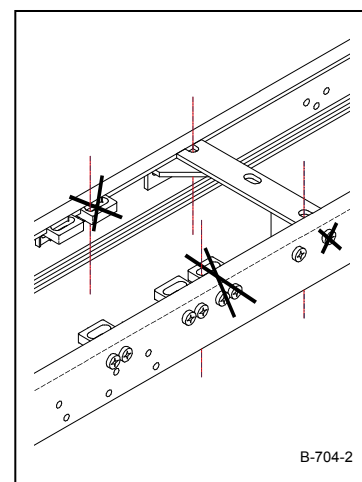

B-704-2

This square tank has to be fixed to the frame at exactly **the same fixing points** as for the standard **round tank** (please refer to the assembly instructions of your chassis kit). The following drawings serve as examples: **Main drawing** shows the attachment to the right-hand side on a professional chassis Art.-No. 730/731; **illustr. b** indicates the attachment to a standard chassis Art.-No. 357/360. The attachment to the left-hand side as well as to other chassis types has to be executed in the same sense.

→ **NOTE:** When attaching to a **professional frame** (ill. a) the type of fixing changes as follows:

- "Attachment to the crosshead":** As the tank support has to sit close to the frame, take off one of the two screws M2.
- "Attachment to the mounting angle 1 (plastic)":** The mounting angle will not be used on the professional frame. The second fixing point is variable.
- "Attachment to the mounting angle 2 (aluminium)":** Attachment to the screws of the mounting angle remains unchanged.

First mount each of the straight ends of the clamp fittings **20124** along with the tank supports **27404** to the left- or right-hand side of the frame; for this purpose use screws **21844** and nuts M3.

Press the rods **31946** into the bushings of one tank cover **27409**, and slide then the tank cover into the tank tube **27397**; afterwards press the second tank cover onto the pins and into the tank tube. Now set the tank into the tank supports. Lay the long ends of the tank supports and the clamp fittings around the tank tube and fix the clamp fittings from underneath to screws **21844** using washers **20046** and nuts M3.

Finally press the tank lock **27402** into the opening of the tank tube.