




WEDICO-models®
BAUANLEITUNG
2 Schalensitze
Art.-Nr. 457-W



WEDICO-models®
ASSEMBLY INSTRUCTION
2 Bucket Seats
Art.-No. 457-W

Montage des Sitzes zum Einhängen an die Sitzrückwand, bzw. Fahrerhaus-Rückwand


Mounting the seat to hang it into the seat rear panel, resp. cab's rear panel

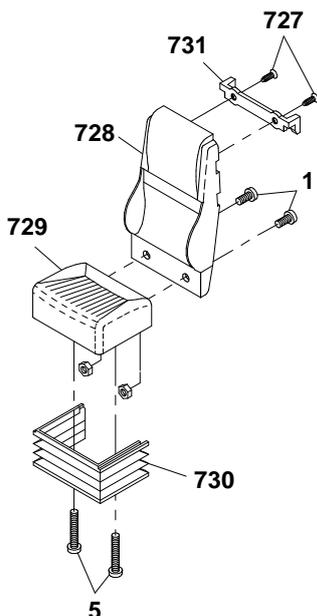

B-457

Alternative Anbringung beim Truck

Alternative attachment when using a Conventional Truck cab

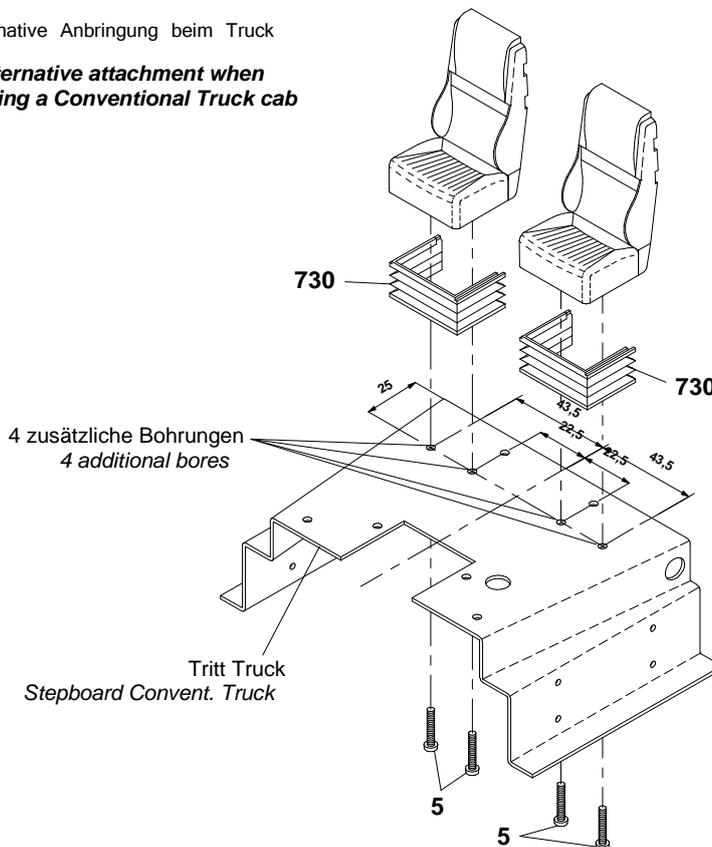

Der Schalensitz kann sowohl in alle Frontlenker-Fahrerhäuser als auch in das Truck-Fahrerhaus von WEDICO eingebaut werden.

Mit Schrauben 1 und Muttern M3 wird das Sitzunterteil 729 an den Sitzrücken 728 angebracht. Der U-Bügel 731 wird am Sitzrücken mit zwei Schrauben 727 befestigt und der Fuß 730 des Schalensitzes mit zwei Schrauben 5 an das Sitzunterteil angeklammt. Die montierten Sitze können dann in die Schlitze an der Sitzrückwand, bzw. Fahrerhaus-Rückwand eingehangen werden.

Beim Truck-Fahrerhaus haben Sie eine zusätzliche Möglichkeit der Anbringung: Sie befestigen den Sitz auf dem Tritt des Truck-Fahrerhauses. Dazu müssen Sie vier 3,2 mm Bohrungen in den angegebenen Maßen in den Tritt bohren. Der ohne U-Bügel montierte Sitz wird dann mit den zwei Schrauben 5 und dem Fuß 730 des Schalensitzes auf den Tritt geschraubt.

The bucket seat suits both types of WEDICO cabs, the C.O.E. cabs as well as the Conventional Truck cab.

Use screws 1 and nuts M3 to attach the seat socket 729 onto the seat back of the 728. With two screws 727 fix the U-bow 731 onto the back of the seat and clamp the socket 730 of the bucket seat with two screws 5 onto the seat socket. Hang the mounted seats into the slots of the seat rear panel, resp. cab's rear panel.

The Conventional Truck cab offers an additional possibility of attachment: Fixing the seat onto the stepboard of the cab. For this purpose you have to drill four holes of 3.2 mm into the stepboard. (See distances marked in the drawing). With two screws 5 and the socket 730 of the bucket seat screw then the seat (without using the U-bow) onto the stepboard.

Stückliste der Packung:

Anz.	Nr.	Bauteil	EDV-Nr.
4	---	Mutter M3	20040
4	1	Schraube M3 x 6	20016
4	5	Schraube M3 x 20	20224
4	727	Senkblechschraube 2,2 x 6,5	26252
2	728	Rücken, Schalensitz	26032
2	729	Unterteil, Schalensitz	26030
2	730	Fuß, Schalensitz	26034
2	731	U-Bügel, Schalensitz	26036

bei Ersatzteilbestellung bitte EDV-Nr. angeben

Parts list of the package:

Qty.	No.	Assembly part	EDP-No.
4	---	Nut M3	20040
4	1	Screw M3 x 6	20016
4	5	Screw M3 x 20	20224
4	727	Countersunk tapping screw 2.2 x 6.5	26252
2	728	Back, bucket seat	26032
2	729	Socket, bucket seat	26030
2	730	Foot, bucket seat	26034
2	731	U-bow, bucket seat	26036

please use EDP-number when ordering spare parts